

# Quick Start Guide

## Unpacking

Verify that all of the items shown are in the box. If an item is missing or appears to be defective, contact Brady technical support immediately.


### Included in the Box

- Printer
- Product CD
- Printer Driver CD
- Power Cord
- Accessories Kit
- USB Cord
- Quick Start Guide
- Cleaning Kit\*
- \*Not available in all regions.

## Components

1 Enclosure Cover	2 Label Exit/Auto Cutter*
3 Media Guides	4 Media
5 Ribbon Cartridge	6 Ribbon Cover
7 Ribbon Cartridge Latch	8 Brady Network Card
9 Expansion Ports	10 Media Wiper
11 Power button	12 Media Bridge*
13 Ribbon Cover Latch	

\*See User's Manual for component descriptions.

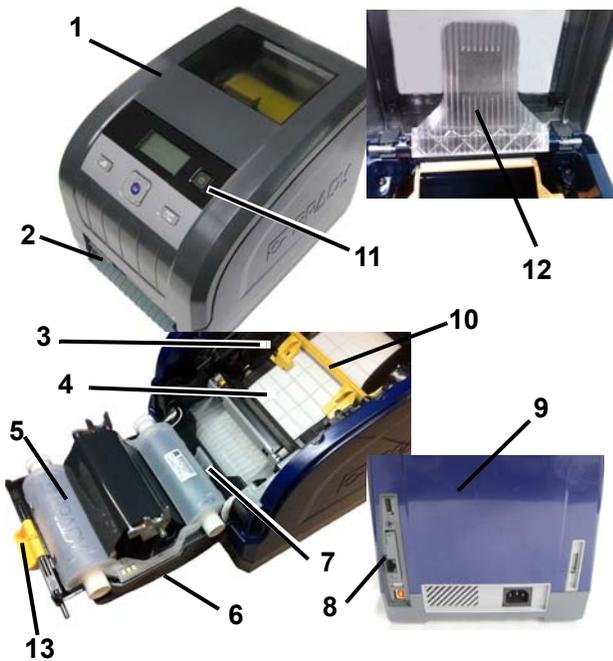

## Installation and Setup


Refer to the User's Manual, located on your product CD for more detailed information.

### Connecting Power

1. Remove printer and power cord from packaging box.
2. Plug power cord into printer and into AC power outlet. Printer automatically powers on.
3. After initial start, press **Power**  to apply or remove power.

### Installing Media

1. Open enclosure cover.
2. Release ribbon latch and swing ribbon cover open.
3. Move yellow media wiper away from media.
4. Move yellow media guides to full-open.
5. Insert media cartridge until spindle ends rest in slots of media holder (touch cell is on left-side of cartridge).
6. Feed media from top of roll until it sits just past the black rubber roller.
7. Close media guides until they touch edge of media liner with media under the guides. Arrows on the guides should line up with edge of liner.
8. For continuous media, move media wiper into position so it rests on media.

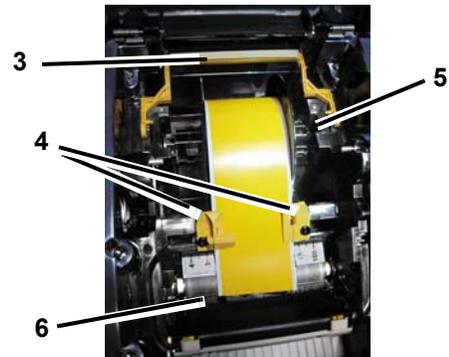

### Installing Ribbon


1. Place ribbon cartridge with ribbon over print head (product label toward machine), then snap into place.



2. Close and latch ribbon cover, then close enclosure cover.

## User Interface

The user interface (UI) contains the display screen, the power button and navigation keys for selecting options and moving through the menu tree. The UI consists of:

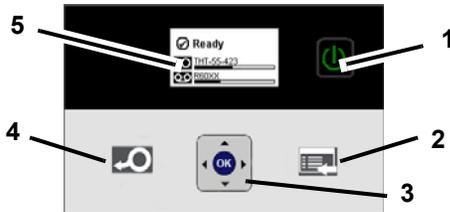


Item #	Icon	Description
1		<b>Power:</b> Applies or removes printer power.
2		<b>Menu:</b> Displays the menu tree screen.
3		<b>Navigation Keys (arrows):</b> Used to select menu options, move through menu tree and exit the menu.
4		<b>Feed:</b> Feeds media through the printer.
5		Display Screen

## Display Screen

The display has two modes, *Ready* and *Menu Selection Mode*. When you power on the printer, the Ready state automatically displays.


### Ready Mode

Displays printer status, media supply and ribbon part numbers and amount remaining.

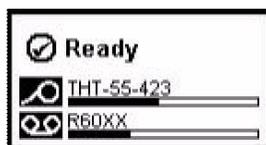

### Menu Selection Mode

When the menu button is pressed, the Menu displays, showing options for setting or selecting printer functions.

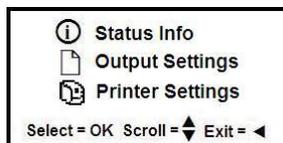

## Using Menus

1. From *Ready* screen, press .
2. To navigate through the menu, use:

Icon	Description
	Scroll through menus.
	Exit or move up a menu level.
	Menu support key.
	Select an option or go to a submenu.

## Printing a Label

Create and print labels from your label-creation software. When the job is done, cut the labels using the cutter on the printer.

## Technical Support

<a href="http://www.bradyid.com">www.bradyid.com</a> (Americas)
<a href="http://www.bradyeurope.com">www.bradyeurope.com</a> (Europe)
<a href="http://www.bradycorp.com">www.bradycorp.com</a> (Asia Pacific)
<a href="http://www.bradyaust.com.au">www.bradyaust.com.au</a> (Australia)
<a href="http://www.bradycanada.ca">www.bradycanada.ca</a> (Canada)
<a href="http://www.bradylatinamerican.com">www.bradylatinamerican.com</a> (Latin America)

## Product Registration

<a href="http://www.bradycorp.com/register">www.bradycorp.com/register</a>
<a href="http://www.bradyaust.com.au/register">www.bradyaust.com.au/register</a> (Australia)



All Rights Reserved.  
[www.bradycorp.com](http://www.bradycorp.com)  
 ©2012 Brady Worldwide, Inc.