


**NTQ23**

Inches (Millimeters)

**SPECIFICATIONS**

**Rating:** 40A, 600V  
**Center spacing:** .390" (9.91)  
**Number of poles:** 3  
**Circuits per foot:** 28  
**Wire size:** AWG #8-22 CU  
**Screw size:** #8-32  
**Mounting options:** C-rail  
**Marking tape:** MT12-1/2  
**Torque rating:** 18 in/lb max.  
**Operating temperature:** 105°C

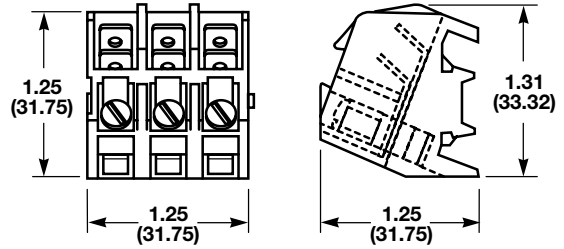

*BIF document: 1415*

**BNQ21**



Inches (Millimeters)

**SPECIFICATIONS**

**Rating:** 40A, 600V; UL/CSA  
**Center spacing:** .437" (11.10)  
**Number of poles:** 1  
**Circuits per foot:** 24  
**Wire size:** AWG #8-22 CU  
**Screw size:** #8-32  
**Quick Connects:** .250" x .031"  
**Mounting options:** Base Mount., Stackable; End Piece (Part No. BQE) is required for mounting. Mounting screws recommended every 8 circuits.  
**Torque rating:** 18 in/lb max.  
**Operating temperature:** 105°C



**BQE**  
End Mounting Adapter Required

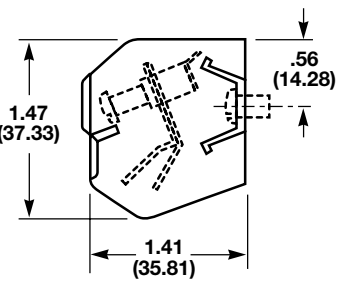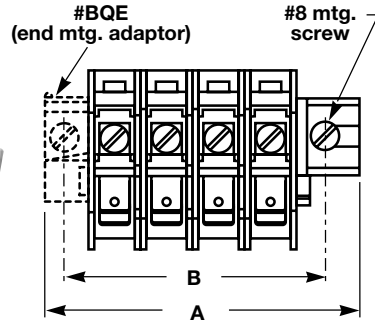

A	B
(N+2) x .437	(N+1) x .437
N = Number of circuits	


*BIF document: 1416*

**BQQ41**



Inches (Millimeters)

**SPECIFICATIONS**

**Rating:** 30A, 600V; UL/CSA  
**Center spacing:** .437" (11.10)  
**Number of poles:** 1  
**Circuits per foot:** 24  
**Wire size:** For use with quick connect terminals only.  
**Quick Connects:** .250" x .031"  
**Mounting options:** Base Mount, Stackable; End Piece (Part No. BQE) is required for mounting. Mounting screws recommended every 8 circuits.  
**Operating temperature:** 105°C

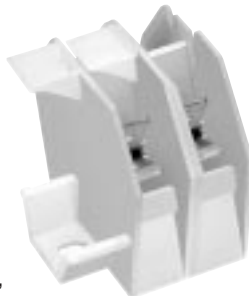

**BQE**  
End Mounting Adapter Required

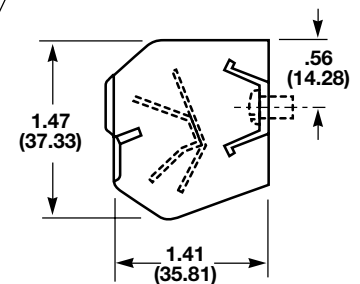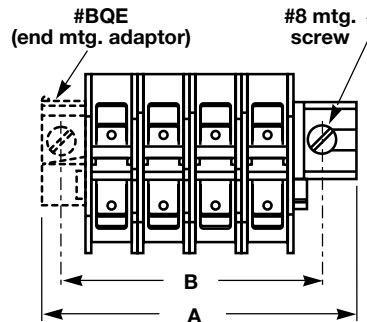

A	B
(N+2) x .437	(N+1) x .437
N = Number of circuits	

*BIF document: 1417*

